



Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Display	 Display / Media
 8	 8	 Vol+	 Vol+
 9	 9	 Vol-	 Vol-
 0	 0	 MTS	 Info / Angle
 DTV/ATV	 D.Menu / Top	 Rec List	 Smart / List
 Recall	 Back / Return	 CH+	 CH+ / Page+
 P.Mode	 Picture / Format	 CH-	 CH- / Page-
 S.Mode	 Sound / Title	 FAV/List	 Fav / Marker / PC
 Sleep	 Sleep / Timer	 Rec	 Rec / Rec Mode





Original	Replacement	Original	Replacement
 Freeze	 Pause / Step / Freeze	 Green	 Green / APP / Repeat
 Guide	 Guide / EPG / --	 Yellow	 Yellow / YouTube / Repeat
 <<	 << / Tune-	 Cyan	 Blue / Prime Video / Random
 >> / Aspect	 >> / Tune+		
 >> / Aspect	 Shift + Picture / Format		
 << / Cancel	 << / Preset-		
 << / Cancel	 Shift + Exit / Cancel / Clear		
 >> / Sub.PG	 >> / Preset+		
 Stop / Index	 Stop / Hold		
 Play/Pause / Timeshift	 Play / Slow		
 Tv/Radio	 TV/Radio /		
 Subtitle	 Subtitle / EQ		
 Reveal	 Eject / Surround		
 Size	 Zoom / Size		
 Hold	 Shift + Stop /		
 Text	 Text / Goto		
 Red	 Red / Netflix / Search		





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DTV/ATV		D.Menu / Top
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	Vol+		Vol+
	Vol-		Vol-
	MTS		Info / Angle
	Rec List		Smart / List
	CH+		CH+ / Page+
	CH-		CH- / Page-
	FAV/List		Fav / Marker / PC
	Rec		Rec / Rec Mode





Original		Replacement		Original		Replacement	
	Freeze		Pause / Step / Freeze		Green		Green / APP / Repeat
	Guide		Guide / EPG / -/-		Yellow		Yellow / YouTube / Repeat
	<<		<< / Tune-		Cyan		Blue / Prime Video / Random
	>> / Aspect		>> / Tune+				
	>> / Aspect		Shift + Picture / Format				
	<< / Cancel		<< / Preset-				
	<< / Cancel		Shift + Exit / Cancel / Clear				
	>> / Sub.PG		>> / Preset+				
	Stop / Index		Stop / Hold				
	Play/Pause / Timeshift		Play / Slow				
	Tv/Radio		TV/Radio /				
	Subtitle		Subtitle / EQ				
	Reveal		Eject / Surround				
	Size		Zoom / Size				
	Hold		Shift + Stop /				
	Text		Text / Goto				
	Red		Red / Netflix / Search				

