



Original	Replacement	Original	Replacement
Standby	Power	Audio	Audio / Lang I/II
Mute	Mute / Dimmer	Subtitle	Subtitle / EQ
1	1	Up	Up
2	2	Left	Left
3	3	Ok	OK
4	4	Right	Right
5	5	Down	Down
6	6	Ch.List	Smart / List
7	7	FAV	Fav / Marker / PC
8	8	Exit/Cancel	Exit / Cancel / Clear
9	9	CH+/Page+	CH+ / Page+
Display	Display / Media	Vol+	Vol+
0	0	S.Mode	Sound / Title
Recall	Back / Return	Vol-	Vol-
Setup	Setup / OPT /	P.Mode	Picture / Format
EPG	Guide / EPG / -/--	CH-/Page-	CH- / Page-
Source	AV / Input / RDS	Red/Goto	Red / Netflix / Search





Original	Replacement
Green/A-B	Green / APP / Repeat
Yellow/Repeat	Yellow / YouTube / Repeat
Blue/Angle	Blue / Prime Video / Random
Record	Rec / Rec Mode
Rec. List	Shift + Rec / Rec Mode
TV/Radio	TV/Radio /
Scaler	Menu / Home
Play	Play / Slow
Pause/Reveal	Pause / Step / Freeze
Stop/Index	Stop / Hold
I<<	I<< / Preset-
<</Mix	<< / Tune-
>>I	>>I / Preset+
>>	>> / Tune+
Text	Text / Goto
S.Page /	D.Menu / Top
Hold/Title	Shift + Stop / Hold

Hold

Original	Replacement
Zoom-	Shift + Zoom /
Zoom+/Size	Zoom / Size
Eject	Eject / Surround
Sleep	Sleep / Timer

