



Original	Replacement
 Power	 Shift + Power
 AMP Power	 Power
 CD	 Shift + 3
 Tuner	 Shift + 6
 Network	 Shift + Fav / Marker / PC
 Phono	 Shift + 4
 Recorder 1	 Shift + 5
 Recorder 2	 Shift + 7
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Input	 Display / Media
 Source Direct	 AV / Input / RDS
 Volume+	 Vol+
 Info	 Info / Angle

Original	Replacement
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Time/Top Menu	 D.Menu / Top
 Mode	 Zoom / Size
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Prog/Favorites	 Fav / Marker / PC
 Down	 Down
 Setup	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6















Original		Replacement		Original		Replacement	
	7		7				
	8		8				
	9		9				
	+10		Guide / EPG / -/--				
	0		0				
	Clear		Exit / Cancel / Clear				
	Dimmer		Shift + Mute / Dimmer				
	Random		Blue / Prime Video / Random				
	Repeat		Green / APP / Repeat				
	Repeat		Yellow / YouTube / Repeat				







 







 








 

 







Original	Replacement
 Power	 Shift + Power
 AMP Power	 Power
 CD	 Shift + 3
 Tuner	 Shift + 6
 Network	 Shift + Fav / Marker / PC
 Phono	 Shift + 4
 Recorder1	 Shift + 5
 Recorder2	 Shift + 7
 Pitch Control-	 CH- / Page-
 Reset	 Back / Return
 Pitch Control+	 CH+ / Page+
 I<<	 I<< / Preset-
 Sound Mode	 Sound / Title
 >>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold

Original	Replacement
 Input	 Display / Media
 Source Direct	 AV / Input / RDS
 Volume+	 Vol+
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Time/Top Menu	 D.Menu / Top
 Mode	 Zoom / Size
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Prog/Favorites	 Fav / Marker / PC
 Down	 Down
 Setup	 Setup / OPT /
 1	 1
 2	 2





	Original	Replacement
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	+10	 Guide / EPG / -/--
	0	 0
	Clear	 Exit / Cancel / Clear
	Dimmer	 +  Shift + Mute / Dimmer
	Random	 Blue / Prime Video / Random
	Repeat	 Green / APP / Repeat
	Repeat	 Yellow / YouTube / Repeat

	Original	Replacement

