



























 

 





 

 

 

 

 

 

 

 

 

 



 



 

 







Original		Replacement		Original		Replacement	
	1		1		9		9
	Standby / On		Power		0		0
	Mute		Mute / Dimmer		Display		Display / Media
	Volume+		Vol+		DVD Set Up		Setup / OPT /
	Volume-		Vol-		Top Menu		D.Menu / Top
	Up		Up		Return		Back / Return
	Left		Left		Menu		Menu / Home
	Right		Right		I<<		I<< / Preset-
	Enter		OK		>>I		>>I / Preset+
	Down		Down		Play		Play / Slow
	2		2		<I		<< / Tune-
	3		3		I>		>> / Tune+
	4		4		Stop		Stop / Hold
	5		5		Pause		Pause / Step / Freeze
	6		6		S Title		Subtitle / EQ
	7		7		Audio		Audio / Lang I/II
	8		8		Angle		Info / Angle






















Original Replacement


















	Zoom		Zoom / Size
	PRG		TV/Radio /
	Repeat 1/All		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Random		Blue / Prime Video / Random
	CLR		Exit / Cancel / Clear
	NTSC/PAL		Picture / Format

Original Replacement






Original	Replacement	Original	Replacement
On/Off	 Power		
Audio Off	 Mute / Dimmer		
Prev.	 I<< / Preset-		
Next	 >>I / Preset+		
Title	 Sound / Title		
Lang	 Audio / Lang I/II		
Subt.	 Subtitle / EQ		
Zoom	 Zoom / Size		
Progr.	 TV/Radio /		
Top Menu	 D.Menu / Top		
C/CH	 Text / Goto		
DVD/TV	 AV / Input / RDS		
Menu	 Menu / Home		
Menu Up	 Up		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		

Original	Replacement	Original	Replacement
Menu Down	 Down		
Return	 Back / Return		
Volume+	 Vol+		
Auto/Track	 Smart / List		
Volume-	 Vol-		
1	 1	1	
2	 2	2	
3	 3	3	
4	 4	4	
5	 5	5	
6	 6	6	
7	 7	7	
8	 8	8	
9	 9	9	
+10	 Guide / EPG / -/-		
0	 0	0	
Rep/A-B	 Yellow / YouTube / Repeat		

