



 






Original	Replacement
 Power	 Power
 TV	 TV/Radio /
 TV	 Shift + 1
 AV	 AV / Input / RDS
 R	 Shift + TV/Radio / Program
 R	 Shift + 6
 F1	 Shift + Red / Netflix /
 F2	 Shift + Green / APP /
 F3	 Shift + Yellow / YouTube /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 0	 0
 Blue	 Blue / Prime Video / Random
 Yellow	 Yellow / YouTube / Repeat
 P+	 CH+ / Page+
 Up	 Up
 White	 Fav / Marker / PC
 Left	 Left
 OK	 OK
 Right	 Right
 Green	 Green / APP / Repeat
 Down	 Down
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Vol+	 Vol+
 Vol-	 Vol-
 Info	 Info / Angle









Original	Replacement
Power	Power
TV	Shift + 1
TV	TV/Radio /
AV	AV / Input / RDS
R	Shift + 6
R	Shift + TV/Radio / Program
F1	Shift + Red / Netflix /
F2	Shift + Green / APP /
F3	Shift + Yellow / YouTube /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Replacement
9	9
0	0
Blue/Picture	Picture / Format
Blue/Picture	Blue / Prime Video / Random
Yellow/Sound	Yellow / YouTube / Repeat
Yellow/Sound	Sound / Title
P+	CH+ / Page+
Up	Up
White	Fav / Marker / PC
Left	Left
OK	OK
Right	Right
Green/Timer	Green / APP / Repeat
Green/Timer	Sleep / Timer
P-	CH- / Page-
Down	Down
Red/Recall	Red / Netflix / Search



