























 























| Original                                                                                           | Replacement                                                                                               | Original                                                                                          | Replacement                                                                                               |
|----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  Standby          |  Power                   |  8             |  8                     |
|  Auto / Eject     |  Eject / Surround        |  9             |  9                     |
|  Mute             |  Mute / Dimmer           |  Input         |  AV / Input / RDS      |
|  P.Mode           |  Picture / Format        |  0             |  0                     |
|  S.Mode           |  Sound / Title           |  Recall        |  Back / Return         |
|  Info             |  Info / Angle            |  Sleep         |  Sleep / Timer         |
|  Nicam            |  Audio / Lang I/II       |  Up            |  Up                    |
|  1                |  1                       |  Left          |  Left                  |
|  2                |  2                       |  Enter         |  OK                    |
|  3                |  3                       |  Right         |  Right                 |
|  Menu             |  Menu / Home             |  Down          |  Down                  |
|  4              |  4                     |  CH-         |  CH- / Page-         |
|  5              |  5                     |  CH+         |  CH+ / Page+         |
|  6              |  6                     |  Vol-        |  Vol-                |
|  Exit / D.Setup |  Setup / OPT /         |  Vol+        |  Vol+                |
|  Exit / D.Setup |  Exit / Cancel / Clear |  Text / Slow |  Text / Goto         |
|  7              |  7                     |  Text / Slow |  Shift + Play / Slow |

| Original                                                                                          | Replacement                                                                                          | Original                                                                                                  | Replacement                                                                                               |
|---------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  8             |  8                |  8                     |  8                     |
|  9             |  9                |  9                     |  9                     |
|  Input         |  AV / Input / RDS |  0                     |  0                     |
|  Recall        |  Back / Return    |  Sleep                 |  Sleep / Timer         |
|  Up            |  Up               |  Left                  |  Left                  |
|  Enter         |  OK               |  Right                 |  Right                 |
|  Down          |  Down             |  CH-                 |  CH- / Page-         |
|  CH-         |  CH- / Page-    |  CH+                 |  CH+ / Page+         |
|  CH+         |  CH+ / Page+    |  Vol-                |  Vol-                |
|  Vol-        |  Vol-           |  Vol+                |  Vol+                |
|  Vol+        |  Vol+           |  Text / Slow         |  Text / Goto         |
|  Text / Slow |  Text / Goto    |  Shift + Play / Slow |  Shift + Play / Slow |





| Original          | Replacement           | Original     | Replacement                 |
|-------------------|-----------------------|--------------|-----------------------------|
| Hold / Play/Pause | Play / Slow           | FAV+ / Goto  | Shift + Up                  |
| Hold / Play/Pause | Shift + Stop /        | FAV+ / Goto  | Shift + Text /              |
| Hold / Play/Pause | Pause / Step / Freeze | Red / D.Prog | TV/Radio /                  |
| Page+ / Stop      | Stop / Hold           | Red / D.Prog | Red / Netflix / Search      |
| Page+ / Stop      | Shift + CH+ /         | Green / Step | Shift + Pause / Step /      |
| Page- / Zoom      | Zoom / Size           | Green / Step | Green / APP / Repeat        |
| Page- / Zoom      | Shift + CH- /         | Yellow / RPT | Shift + Green / APP /       |
| [≡i] / I<<        | I<< / Preset-         | Yellow / RPT | Yellow / YouTube / Repeat   |
| [≡□] / I>>        | I>> / Preset+         | Blue / A-B   | Shift + Yellow / YouTube /  |
| [≡?] / <<         | << / Tune-            | Blue / A-B   | Blue / Prime Video / Random |
| [≡●] / I>>        | I>> / Tune+           | List / Angle | Shift + Info / Angle        |
| EPG / D.Menu      | D.Menu / Top          | List / Angle | Smart / List                |
| EPG / D.Menu      | Guide / EPG / -/--    | SUB-T        | Subtitle / EQ               |
| FAV / D.Title     | Shift + Sound / Title | Aspect       | Shift + Picture / Format    |
| FAV / D.Title     | Fav / Marker / PC     | Rec          | Rec / Rec Mode              |
| FAV- / D.Disp     | Display / Media       |              |                             |
| FAV- / D.Disp     | Shift + Down          |              |                             |

