 





 



 

 


 







Original	Replacement	Original	Replacement
 Power	 Power	 TV/AV	 AV / Input / RDS
 Open/Close	 Eject / Surround	 P+	 CH+ / Page+
 Scan	 Display / Media	 TV/DVD	 Smart / List
 Swap	 Back / Return	 V-	 Vol-
 Call	 Shift + OK	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 V+	 Vol+
 1	 1	 Exit	 Exit / Cancel / Clear
 2	 2	 P-	 CH- / Page-
 3	 3	 P.STD	 Picture / Format
 4	 4	 Red/Picture	 Shift + Picture / Format
 5	 5	 Red/Picture	 Red / Netflix / Search
 6	 6	 Green/Sound	 Sound / Title
 7	 7	 Green/Sound	 Green / APP / Repeat
 8	 8	 Yellow/Time	 Yellow / YouTube / Repeat
 9	 9	 Blue/Function	 Blue / Prime Video / Random
 0	 0	 <<	 << / Tune-
 -/--	 Guide / EPG / -/--	 >>	 >> / Tune+





Original	Replacement
Power	Power
Open / Close	Eject / Surround
Scan	Shift + Setup / OPT / Tools
Swap	Back / Return
Call	Smart / List
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide / EPG / -/--

Original	Replacement
TV/AV	AV / Input / RDS
I-II	Shift + Audio / Lang I/II
P+	CH+ / Page+
TV/DVD	Shift + 2
TV/DVD	Shift + 1
V-	Vol-
Menu	Menu / Home
V+	Vol+
Exit	Exit / Cancel / Clear
P-	CH- / Page-
P.Std	Picture / Format
Red / Picture	Red / Netflix / Search
Red / Picture	Shift + Picture / Format
Green / Sound	Green / APP / Repeat
Green / Sound	Shift + Sound / Title
Yellow / Time	Yellow / YouTube / Repeat
Yellow / Time	Sleep / Timer



