



Original	Replacement
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
List	Shift + Smart / List
Recall	Back / Return
FAV	Fav / Marker / PC
Subtitle	Subtitle / EQ
Info	Info / Angle
TTX	Text / Goto

Original	Replacement
Vol+	Vol+
Vol-	Vol-
Page+	Shift + CH+ /
Page-	Shift + CH- /
CH+	CH+ / Page+
CH-	CH- / Page-
Lang	Audio / Lang I/II
Timeshift	Smart / List
Tv/Radio	TV/Radio /
EPG	Guide / EPG / -/--
Up	Up
Down	Down
Left	Left
Right	Right
OK	OK
Menu	Menu / Home
Exit	Exit / Cancel / Clear





Original	Replacement	Original	Replacement
	Red 		Red / Netflix / Search
	Green 		Green / APP / Repeat
	Yellow 		Yellow / YouTube / Repeat
	Blue 		Blue / Prime Video / Random
			Play / Slow
			Pause / Step / Freeze
			>>  / Preset+
			Rec / Rec Mode
			<< / Tune-
			>> / Tune+
			I<< / Preset-
			Stop / Hold
			Sleep / Timer
			AV / Input / RDS
	+		Shift + 4
			Picture / Format

