 



 





 









 

 

 

 



 










 
 
 








 

 



 


 

 







Original	Replacement	Original	Replacement
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Lang		Audio / Lang I/II
	0		0
	TXT		Text / Goto
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	Home		Menu / Home
	P-		CH- / Page-
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	Guide		Guide / EPG / -/-
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	*1		Smart / List
	prime video		Shift + Blue / Prime
	Red		Red / Netflix / Search





Original	Replacement	Original	Replacement
	Green / APP / Repeat 		
	Yellow / YouTube / Repeat 		
	Blue / Prime Video / Random 		
	<< / Tune- 		
	Pause / Step / Freeze 		
	>> / Tune+ 		
	Rec / Rec Mode 		
	Play / Slow 		
	Stop / Hold 		

