





















 





Original	Replacement	Original	Replacement
Update	 +  Shift + Red / Netflix /	Green	 Green / APP / Repeat
Browse	 Smart / List	Yellow	 Yellow / YouTube / Repeat
Reveal	 +  Shift + Green / APP /	Blue	 Blue / Prime Video / Random
Rotate Text	 Setup / OPT /	3	 3
Off/Tim	 Pause / Step / Freeze	Audio+	 +  Shift + Vol+
On/Tim	 Play / Slow	Tone-	 << / Tune-
Audio-	 +  Shift + Vol-	Mix Scan	 +  Shift + Text /
4	 4	Color+ P.Std	 Picture / Format
5	 5	Contrast+	 >>  / Preset+
6	 6	Color- S.Std	 Sound / Title
7	 7	Contrast-	  << / Preset-
8	 8	Surround	 Eject / Surround
9	 9	Nicam/Mono	 +  Shift + Audio / Lang I/II
Guide -/-- 1.	 Guide / EPG / -/--	Level L	 +  Shift + Left
0/10	 0	Level R/Woofers	 +  Shift + Right
2.Fav P/C 2.	 Fav / Marker / PC	Display	 Display / Media
Red	 Red / Netflix / Search	Mute	 Mute / Dimmer



Original	Replacement	Original	Replacement
Txt Stop	 Stop / Hold	Back	 Back / Return
Info	 Info / Angle	Volume+	 Vol+
Subt.List	 Subtitle / EQ	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Menu audio	 Audio / Lang I/II
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1
Txt Expand	 Zoom / Size	2	 2
TV/AV	 AV / Input / RDS		
Menu	 Menu / Home		
Menu Up	 Up		
On/Off	 Power		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Menu Off	 Exit / Cancel / Clear		
Menu Down	 Down		

