

 

 





 





 











 













Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 VOD	 Display / Media
 0	 0
 TV	 TV/Radio /
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-

Original	Replacement
 P-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 List	 Smart / List
 Guide	 Guide / EPG / -/-
 Info	 Info / Angle
 Mos	 D.Menu / Top
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze





Original	Replacement
	TUNE- << / Tune-
	TUNE+ >> / Tune+
	NETFLIX Red / Netflix / Search
	APP Green / APP / Repeat
	YouTube REPEAT Yellow / YouTube / Repeat
	Prime Video REPEAT A-B Blue / Prime Video / Random

Original	Replacement

