



| Original | Replacement |
|----------|-------------------|
| Power | Power |
| Source | AV / Input / RDS |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| TV | TV/Radio / |
| 0 | 0 |
| Recall | Fav / Marker / PC |
| V+ | Vol+ |
| Mute | Mute / Dimmer |
| P+ | CH+ / Page+ |

| Original | Replacement |
|----------------|-----------------------|
| V- | Vol- |
| World/Internet | Smart / List |
| P- | CH- / Page- |
| Menu | Menu / Home |
| Q.Menu | D.Menu / Top |
| Up | Up |
| Left | Left |
| OK | OK |
| Right | Right |
| Down | Down |
| Back | Back / Return |
| Exit | Exit / Cancel / Clear |
| i | Info / Angle |
| Music/Camera | Display / Media |
| TV Guide | Guide / EPG / -/- |
| */O | Shift + 1 |
| */Q | Shift + 2 |



