


 

 






Original	Replacement
Standby	Power
1/VCR/DVR	1
2/CBL/SAT	2
3/Game/TV	3
4/AUX	4
5/Multi CH	5
6/DVD	6
7/Tape	7
8/Tuner	8
9/CD	9
+10/10/-/-/D.Tun	Guide / EPG / -/-
0/11/Dimmer	0
CLR/12/Sleep/Ent	Fav / Marker / PC
CH Disc	CH+ / Page+
CH Disc Album-	CH- / Page-
Vol+	Vol+
Vol-	Vol-

Original	Replacement
Up	Up
Previous Menu/Muting	Menu / Home
Left/Playlist/Cat	Left
Enter	OK
Right/Playlist/Cat	Right
Setup	Setup / OPT /
Down	Down
Return	Back / Return
Pause/<	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<< / Tune-	<< / Tune-
>> / Tune+	>> / Tune+
Stereo	Sound / Title
Surround	Eject / Surround
< Listening Mode	Shift + Left
Listening Mode >	Shift + Right





Original	Replacement
 Test Tone/Audio	 Audio / Lang I/II
 CH Sel/Subtitle	 Subtitle / EQ
 Random Level-	 Blue / Prime Video / Random
 Repeat Level+	 Green / APP / Repeat
 Display	 Display / Media
 L.Night/DVD	 Sleep / Timer
 Cine FLTR/HDD	 TV/Radio /

Original	Replacement



 




Original	Replacement	Original	Replacement
Standby	Power	Enter	OK
1/VCR/DVR	1	Right/Playlist/Cat	Right
2/CBL/SAT	2	Setup	Setup / OPT /
3/Game/TV	3	Down	Down
4/AUX	4	Return	Back / Return
5/Multi CH	5	Pause/<	Pause / Step / Freeze
6/DVD	6	Play	Play / Slow
7/Tape	7	Stop	Stop / Hold
8/Tuner	8	<<	<< / Tune-
9/CD	9	>>	>> / Tune+
+10/10/-/-/D.Tun	Guide / EPG / -/-	<<	<< / Preset-
0/11/Dimmer	0	>>	>> / Preset+
CLR/12/Sleep/Ent	Fav / Marker / PC	Stereo	Sound / Title
Guide/Top	D.Menu / Top	Surround	Eject / Surround
Up	Up	< Listening Mode	CH- / Page-
Previous Menu/Muting	Menu / Home	Listening Mode >	CH+ / Page+
Left/Playlist/Cat	Left	Test Tone/Audio	Audio / Lang I/II







 



 



 

 

 

 



 

 

 





 

 

 

 

 

 

 

 




 

 




 



Original	Replacement
 SUBTITLE CH SEL	 LIST SMART Smart / List
 RANDOM LEVEL-	 Prime Video RANDOM Blue / Prime Video / Random
 REPEAT LEVEL+	 APP REPEAT Green / APP / Repeat
 DISPLAY	 MEDIA DISPLAY Display / Media
 PLAY MODE VCR	 RDS AV INPUT AV / Input / RDS
 L NIGHT DVD	 TIMER SLEEP Sleep / Timer
 CINE FLTR HDD	 PROGRAM TV/ RADIO TV/Radio /

Original	Replacement



 

 



 



 

 

 

 



 

 





 

 

 







 









Original	Replacement	Original	Replacement
 Standby	 Power	 Pause / <	 Pause / Step / Freeze
 1/VCR/DVR	 1	 Play	 Play / Slow
 2/CBL/SAT	 2	 Stop	 Stop / Hold
 3/Game/TV	 3	 <<	 << / Tune-
 4/AUX	 4	 >>	 >> / Tune+
 5/Multi CH	 5	 I<<	 I<< / Preset-
 6/DVD	 6	 >>I	 >>I / Preset+
 7/Tape	 7	 Stereo	 Audio / Lang I/II
 8/Tuner	 8	 Surround	 Eject / Surround
 9/CD	 9	 < Listening Mode	 Left
 +10/10/-/-/D.Tun	 Guide / EPG / -/-	 Listening Mode >	 Right
 0/11/Dimmer	 0	 Level-/Random	 Blue / Prime Video / Random
 CLR/12/Sleep/Ent	 Fav / Marker / PC	 Level+/Repeat	 Green / APP / Repeat
 Disc/Album	 CH+ / Page+	 Display	 Display / Media
 Disc/Album CH-	 CH- / Page-		
 Vol+	 Vol+		
 Vol-	 Vol-		





Original	Replacement	Original	Replacement
 Standby	 Power	 <<	 << / Tune-
 1/VCR/DVR	 1	 Stereo	 Audio / Lang I/II
 2/CBL/SAT	 2	 Surround	 Eject / Surround
 3/Game/TV	 3	 < Listening Mode	 Left
 4/AUX	 4	 Listening Mode >	 Right
 5/Multi CH	 5	 Play Mode/VCR	 OK
 6/DVD	 6	 L.Night/DVD	 Sleep / Timer
 7/Tape	 7		
 8/Tuner	 8		
 9/CD	 9		
 +10/10/-/-/D.Tun	 Guide / EPG / -/-		
 0/11/Dimmer	 0		
 Disc/Album	 CH+ / Page+		
 Disc/Album CH-	 CH- / Page-		
 Pause/<	 Pause / Step / Freeze		
 Play	 Play / Slow		
 Stop	 Stop / Hold		

