



Original	Replacement	Original	Replacement
On	Power	Muting	Mute / Dimmer
Standby	Shift + Power	Level Down	CH- / Page-
Sleep	Sleep / Timer	Level Up	CH+ / Page+
Return	Back / Return	I<<	I<< / Preset-
Setup	Setup / OPT /	Play	Play / Slow
Disc+	Shift + CH+ /	>>I	>>I / Preset+
Up	Up	<<	<< / Tune-
Vol+	Vol+	Stop	Stop / Hold
Disc-	Shift + CH- /	>>	>> / Tune+
Left	Left	Rec / Random	Rec / Rec Mode
Enter	OK	Pause / Play Rev.	Pause / Step / Freeze
Right	Right	Open / Close	Shift + Eject / Surround
Vol-	Vol-	Input Sel. DVD	2
Down	Down	Input Sel. CD	3
Audio	Audio / Lang I/II	Input Sel. V1	1
CH Sel	Smart / List	Input Sel. V2	4
Test	Text / Goto	Input Sel. T1	5





Original	Replacement	Original	Replacement
T2 Input Sel. T2	8		
V3 Input Sel. V3	7		
V4 Input Sel. V4	9		
TUN Input Sel. TUN	6		
PH Input Sel. PH	0		
1 Stereo	SOUND Sound / Title		
2 Direct	NETFLIX Red / Netflix / Search		
3 DSP	SHIFT + Right		
4 SURR	SURROUND Eject / Surround		
5 A.ST	APP Green / APP / Repeat		
6 DSP	SHIFT + Left		
7 SP A	YouTube Yellow / YouTube / Repeat		
8 SP B	Prime Video Blue / Prime Video / Random		
9 Re-EQ	EQ Subtitle / EQ		
+10 DISPLAY	MEDIA Display / Media		
0 DIMMER	SHIFT + DIMMER MUTE Shift + Mute / Dimmer		
SEARCH ZONE 2	RDS AV / Input / RDS		















Original	Replacement	Original	Replacement
	Power		Subtitle / EQ
	+ Shift + Power		I<< / Preset-
	Back / Return		Play / Slow
	Setup / OPT /		>>I / Preset+
	CH+ / Page+		<< / Tune-
	Up		Stop / Hold
	Vol+		>> / Tune+
	CH- / Page-		Blue / Prime Video / Random
	Left		Pause / Step / Freeze
	OK		Eject / Surround
	Right		1
	Vol-		2
	Down		3
	D.Menu / Top		4
	Menu / Home		5
	Mute / Dimmer		6
	Info / Angle		7














 

 


 






 











Original	Replacement
	
	
	 Guide / EPG / -/--
	
	 Red / Netflix / Search

Original	Replacement





Original	Replacement	Original	Replacement
	ON		Power
	STDBY		Shift + Power
	Disc+		CH+ / Page+
	Vol+		Vol+
	Vol-		Vol-
	Muting		Mute / Dimmer
	I<<		I<< / Preset-
	Play		Play / Slow
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	>>		>> / Tune+
	Random		Blue / Prime Video / Random
	Pause		Pause / Step / Freeze
	Open / Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/-
	0		0





Original	Replacement
ON	Power
STDBY	Shift + Power
Vol+	Vol+
Enter	OK
Enter	Fav / Marker / PC
Vol-	Vol-
Muting	Mute / Dimmer
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
>>	>> / Tune+
Rec / Random	Rec / Rec Mode
Rec / Random	Blue / Prime Video / Random
Pause	Pause / Step / Freeze
Open / Close	Eject / Surround

Original	Replacement
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	Guide / EPG / -/--
0	0

