
 


 






 
 

 



 

 
 











 

 
 
 

 




Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡]		Text
	↑		Shift + Guide
	Menu		Menu
	i		Info
	Up		Up
	Left / I<<		Left
	OK		Ok
	Right / >>I		Right
	Down		Down
	EPG		Guide
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	∧		Ch +
	∨		Ch -
	<< / [↓]		<<
	>> / [□]		>>
	Play		Play
	Stop / [?]		Stop
	Pause		Pause
	Rec / [≡]		Rec
	RED / TV		Red
	Green / Picture		Green





Original	Replacement	Original	Replacement
RED / TV	AV		
Yellow / Video	Yellow		
Blue / Audio	Blue		
www	Smart		
♥	Pre Ch		
?	Options		
Orange	Media		

