 


 


 
 




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 YPbPr	 Shift + 3
 MTS	 Audio / Lang I/II
 VGA	 Shift + 2
 TV	 Shift + 1
 AV	 Shift + AV / Input / RDS
 HDMI	 Shift + 0
 EPG	 Guide / EPG / -/--
 Aspect	 Setup / OPT /
 Aspect	 Shift + Picture / Format
 Menu	 Menu / Home
 Up	 Up

Original	Replacement
 Input	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 TV Display	 Display / Media
 Vol+	 Vol+
 S.M	 Sound / Title
 CH+	 CH+ / Page+
 Vol-	 Vol-
 P.M	 Picture / Format
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4





Original	Replacement	Original	Replacement
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
●	●	PC FAV MARKER	Fav / Marker / PC
0	0	HDMI - BAT 0	0
RECALL	Recall	RETURN BACK	Back / Return





Original	Replacement
Power	Power
Mute	Mute / Dimmer
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
YPbPr	Shift + Menu /
CC	Subtitle / EQ
MTS	D.Menu / Top
VGA	Sleep / Timer
DTV strength	Setup / OPT /
TV	Shift + 1
AV	AV / Input / RDS
HDMI	Shift + 0
CHList	Smart / List
EPG	Guide / EPG / -/--
FAV	Fav / Marker / PC

Original	Replacement
Aspect	Zoom / Size
Menu	Menu / Home
Up	Up
Source	Shift + AV / Input / RDS
Left	Left
Enter	OK
Right	Right
Exit	Exit / Cancel / Clear
Down	Down
Tv Display	TV/Radio /
Vol+	Vol+
S.M	Sound / Title
CH+	CH+ / Page+
Vol-	Vol-
P.M	Picture / Format
CH-	CH- / Page-
1	1





Original	Replacement
2	DVD 2
3	CD - STB 3
4	VIDEO 4
5	TAPE 5
6	TUNER 6
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
.	SHIFT + GUIDE EPG
0	HDMI - BAT 0
RECALL	RETURN BACK

Original	Replacement

