

 


 





 


 

 


 




 


 




Original	Replacement	Original	Replacement
 Power	 Power	 Right	 Right
 Menu	 Menu	 Left	 Left
 Text	 Text	 Red	 Red
 [+]/Aspect	 Format	 Green	 Green
 [≡ ♦]/STTL	 Subt	 Yellow	 Yellow
 Input TV	 TV/R	 Blue	 Blue
 Input AV	 AV	 Mute	 Mute
 i	 Info	 Vol+	 Vol +
 X/Exit	 Exit	 Vol-	 Vol -
 Back/Return	 Back	 CH+	 Ch +
 Option	 Options	 CH-	 Ch -
 Home	 Smart	 1	 1
 APPS	 Media	 2	 2
 Guide	 Guide	 3	 3
 OK	 Ok	 4	 4
 Up	 Up	 5	 5
 Down	 Down	 6	 6





Original		Replacement		Original		Replacement	
	7		7				
	8		8				
	9		9				
	0		0				
	Off Timer		3D				
	Last View		Pre Ch				
	?/Help		D. Menu				
	Play		Play				
	>>		>>				
	<<		<<				
	Pause		Pause				
	>>		>>				
	<<		<<				
	Stop		Stop				
	Rec		Rec				

