
 
 



 
 
 
 
 



 


 
 


 


 
 



 



 




 

 
 


 






 
 



 



 







 





 
 








Original	Replacement
	Power
	Sleep
	Dimmer
	iPod/USB
	CD
	Radio
	<<
	I<<
	Play
	Pause
	>>I
	>>
	Stop
	Vol-
	Vol+
	Setup
	Mute

Original	Replacement
	Display/iPod
	Sound
	Play Menu
	Album Down
	OK
	Album Up
	Menu
	Dual
	D. Menu
	Down
	Ok
	Up
	TV
	DVD
	SAT
	AUX
	PLAY MODE
	II
	■
	REC MODE
	⏮
	⏪
	⏩
	⏭
	DISC NAV
	LIST
	SOUND
	AD
	SETTINGS
	DUAL
	SUBT
	OPT
	PROG
	SEARCH
	PICTURE
	ECO
	SLEEP
	TV/R
	FORMAT
	3D
	E-MANUAL
	REPEAT
	ZOOM
	TIMER
	D.MENU
	TEXT
	▲
	AV
	TOP MENU
	MENU
	INFO
	CLEAR
	EXIT
	RETURN
	BACK
	HOME
	SMART
	APP
	MEDIA
	+
	-
	+
	-
	1
	2
	3
	4
	5
	6
	7
	8
	9
	FAV
	GUIDE
	0
	PRE-CH
	A
	B
	C
	D

