



| Original    | Replacement                      |
|-------------|----------------------------------|
| Power       | Power                            |
| Power Tv    | +  Shift + Power                 |
| AV Input Tv | AV / Input / RDS                 |
| Vol+ Tv     | Vol+                             |
| Vol- Tv     | Vol-                             |
| 1           | 1                                |
| 2           | 2                                |
| 3           | 3                                |
| 4           | 4                                |
| 5           | 5                                |
| 6           | 6                                |
| 7           | 7                                |
| 8           | 8                                |
| 9           | 9                                |
| 0           | 0                                |
| Cancel      | +  Shift + Exit / Cancel / Clear |
| Audio       | Audio / Lang I/II                |

| Original    | Replacement                    |
|-------------|--------------------------------|
| Open/Close  | Eject / Surround               |
| Status      | TV/Radio /                     |
| PIP         | Zoom / Size                    |
| Internet    | Smart / List                   |
| << Search   | << / Tune-                     |
| Play        | Play / Slow                    |
| Search >>   | >> / Tune+                     |
| I<< Skip    | I<< / Preset-                  |
| Pause       | Pause / Step / Freeze          |
| Skip >>I    | >>I / Preset+                  |
| Stop        | Stop / Hold                    |
| Pop Up Menu | Menu / Home                    |
| EXit        | Exit / Cancel / Clear          |
| Option      | Setup / OPT /                  |
| Return      | Back / Return                  |
| Top Menu    | D.Menu / Top                   |
| Netflix     | Shift + Red / Netflix / Search |



