

 

 

 





 

 

 

 

 









 

 

 

 

 



 

 

 

 

 



 
 


 








 




Original	Replacement	Original	Replacement
	Power		Power
	Power Tv		Shift + Power
	Tv/AV Tv		Shift + AV / Input / RDS
	Vol+ Tv		Shift + Vol+
	DVD		Shift + 2
	FM		TV/Radio /
	EXT-IN		AV / Input / RDS
	Vol- Tv		Shift + Vol-
	1		1
	2		2
	3		3
	Select >		CH+ / Page+
	4		4
	5		5
	6		6
	< Select		CH- / Page-
	7		7
	8		8
	9		9
	Vol+		Vol+
	Cancel		Exit / Cancel / Clear
	0		0
	+10		Guide / EPG / -/-
	Vol-		Vol-
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<< Slow/Search		<< / Tune-
	Slow/Search >>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Quick OSD		Red / Netflix / Search
	[I] VS		Green / APP / Repeat
	One Touch Play		Fav / Marker / PC





Original	Replacement
Top Menu/Direct Navigator	D.Menu / Top
Up	Up
Functions	Smart / List
<II/Left	Left
Enter	OK
Right/II>	Right
Menu/Play List	Menu / Home
Down	Down
Return	Back / Return
Level/Subwoofe	Sound / Title
EQ	+ Shift + Subtitle / EQ
H.Bass	Info / Angle
Group	Picture / Format
Audio	Audio / Lang I/II
Repeat	+ Shift + Green / APP /
Play Mode	Text / Goto
Quick Replay	Blue / Prime Video / Random

Original	Replacement
Zoom	Zoom / Size
Manual Skip	Yellow / YouTube / Repeat
Page/Angle	+ Shift + Setup / OPT / Tools
Subtitle	Subtitle / EQ
Setup	Setup / OPT /
Sleep	Sleep / Timer
FL.Display	Display / Media
Muting	Mute / Dimmer

