



 

 








 

 
 
 


 

 

 

 







Original	Replacement	Original	Replacement
	Power		Green / APP / Repeat
	Stop		Yellow / YouTube / Repeat
	Pause		Blue / Prime Video / Random
	Rec		Info / Angle
	<<		Setup / OPT /
	Play		Up
	>>		Left
	Zoom / Size		OK
	D.Menu / Top		Right
	Picture / Format		Back / Return
	Guide / EPG / -/--		Down
	Shift + Red / Netflix /		Display / Media
	AV / Input / RDS		Vol+
	Smart / List		Shift + Smart / List
	Menu / Home		CH+ / Page+
	Exit / Cancel / Clear		Vol-
	Red / Netflix / Search		Mute / Dimmer





Original	Replacement	Original	Replacement
CH-	CH- / Page-		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
Subtitle	Subtitle / EQ		
0	0		
Text	Text / Goto		

