
 
 
 

 

 





 




 




 

 

 

 

 
 




Original	Replacement
	
Power	Power
	
Stop	Stop
	
Pause	Pause
	
Rec	Rec
	
Play	Play
	
<<	<<
	
>>	>>
	
Tv Guide	Guide
	
[<>]/Format	Format
	
* / Setup	Menu
	
Home	Smart
	
TV/Exit	Exit
	
Sources	AV
	
Red	Red
	
Green	Green
	
Yellow	Yellow
	
Blue	Blue

Original	Replacement
	
[i+]/Info	Info
	
Options	Options
	
List	List
	
Back	Back
	
Vol+	Vol +
	
Vol-	Vol -
	
Mute	Mute
	
CH+	Ch +
	
CH-	Ch -
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7
	
8	8





Original		Replacement	
	9		9
	0		0
	Subtitle		Subt
	Text		Text
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Original		Replacement	

