 






 






 













 

 





 

 

 

 
 

 

 

 






Original	Replacement
	 Power
	 Ambilight
	 Shift + Blue / Prime
	 Shift + Yellow / YouTube /
	 Shift + Red / Netflix /
	 D.Menu / Top
	 AV / Input / RDS
	 Exit / Cancel / Clear
	 Menu / Home
	 Up
	 Left
	 OK
	 Right
	 Down
	 Back / Return
	 Display / Media
	 Shift + Menu / Home

Original	Replacement
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Info / Angle
	 Pause / Step / Freeze
	 Stop / Hold
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Vol+
	 Guide / EPG / -/-
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer
	 CH- / Page-
	 1





Original	Replacement	Original	Replacement
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0
	*		Setup / OPT /

