



Original	Replacement	Original	Replacement
Source	AV / Input / RDS	>10	Guide / EPG / -/--
Power	Power	0/10	0
DVD	Red / Netflix / Search	C	Exit / Cancel / Clear
TUN	Green / APP / Repeat	Tv Vol+	Shift + Vol+
V1	Blue / Prime Video / Random	Tv Vol-	Shift + Vol-
V2	Shift + Blue / Prime	Up/FQ+	Up
A1	Yellow / YouTube / Repeat	Up/FQ+	>> / Tune+
A2	Shift + Red / Netflix /	Left/ST-	Left
1	1	Left/ST-	I<< / Preset-
2	2	Right/ST+	Right
3	3	Right/ST+	>>I / Preset+
4	4	Down/FQ-	Down
5	5	Down/FQ-	<< / Tune-
6	6	Band	Display / Media
7	7	Station Memory	Smart / List
8	8	Mono	Audio / Lang I/II
9	9	1 Tv	Shift + 1





Original	Replacement	Original	Replacement
2 Tv	Shift + 2	Menu Tv	Shift + Menu /
3 Tv	Shift + 3	Stop Tv	Shift + Stop /
4 Tv	Shift + 4	Play Tv	Shift + Play /
5 Tv	Shift + 5	Pause Tv	Shift + Pause / Step /
6 Tv	Shift + 6	Rec Tv	Shift + Rec / Rec Mode
7 Tv	Shift + 7	I<< Tv	Shift + I<< / Preset-
8 Tv	Shift + 8	>>I Tv	Shift + >>I / Preset+
9 Tv	Shift + 9	CH- Tv	Shift + CH- /
>10 Tv	Shift + Guide / EPG / -/-	CH+ Tv	Shift + CH+ /
0/10 Tv	Shift + 0	<< Tv	Shift + << /
C Tv	Shift + Exit / Cancel / Clear	>> Tv	Shift + >> /
Power Tv	Shift + Power	PGM Tv	Shift + D.Menu / Top Menu
Up Tv	Shift + Up	RDM Tv	Shift + Subtitle / EQ
Left Tv	Shift + Left	Disp Tv	Shift + Display / Media
Enter Tv	Shift + OK	Last Memory Tv	Shift + Back / Return
Right Tv	Shift + Right		
Down Tv	Shift + Down		



 





















 

 



















 



 

 










 








Original	Replacement	Original	Replacement
Source	AV / Input / RDS	Sleep	Sleep / Timer
Power	Power	6	6
DVD	Green / APP / Repeat	Time/Clock ADJ	Shift + Sleep / Timer
TUN	Red / Netflix / Search	7	7
V1	Blue / Prime Video / Random	[I]/DTS	Picture / Format
V2	Shift + Blue / Prime	8	8
A1	Yellow / YouTube / Repeat	Test Tone	Text / Goto
A2	Shift + Red / Netflix /	9	9
1	1	CH Select	Shift + Smart / List
Midnight	Zoom / Size	>10	Guide / EPG / -/--
2	2	Sound Control	Sound / Title
P.Bass	Eject / Surround	0/10	0
3	3	DSP	Setup / OPT /
Function	Smart / List	C	Fav / Marker / PC
4	4	Enter/Disc / DSP	Shift + OK
FL Dimmer	Shift + Mute / Dimmer	TV CH+	Shift + CH+ /
5	5	Tv Vol+	Shift + Vol+





Original	Replacement	Original	Replacement
 System	 Vol+	 Return	 Back / Return
 TV CH-	 Shift + CH- /	 I<</Page-	 I<< / Preset-
 Tv Vol-	 Shift + Vol-	 >>I/Page+	 >>I / Preset+
 System	 Vol-	 <II/CH-	 CH- / Page-
 Tv Input	 Shift + AV / Input / RDS	 II>/CH+	 CH+ / Page+
 Power Tv	 Shift + Power	 <<	 << / Tune-
 Mute	 Mute / Dimmer	 >>	 >> / Tune+
 Up/FQ+	 Up	 Top Menu	 D.Menu / Top
 Left/ST-	 Left	 PGM	 TV/Radio /
 Enter	 OK	 Subtitle	 Subtitle / EQ
 Right/ST+	 Right	 RDM	 Shift + Display / Media
 Down/FQ-	 Down	 Audio	 Audio / Lang I/II
 Exit	 Exit / Cancel / Clear	 Disp	 Display / Media
 Menu	 Menu / Home	 Last Memory	 Shift + Back / Return
 Stop	 Stop / Hold	 Angle	 Info / Angle
 Play	 Play / Slow	 Repeat	 Shift + Green / APP / Repeat
 Pause	 Pause / Step / Freeze	 A-B	 Shift + YouTube / Repeat

 





 
 






Original		Replacement		Original		Replacement	
	Source		AV / Input / RDS		0/10		0
	Power		Power		C		Fav / Marker / PC
	DVD		Green / APP / Repeat		Up / Pause		Up
	TUN		Red / Netflix / Search		Left/<<		Left
	V1		Blue / Prime Video / Random		Enter/Play		Play / Slow
	V2		Shift + Blue / Prime / Prime		Right/>>		>> / Tune+
	A1		Yellow / YouTube / Repeat		Down/Stop		Stop / Hold
	A2		Shift + Red / Netflix /		Down/Stop		Down
	1		1		Enter/Play		OK
	2		2		Up / Pause		Pause / Step / Freeze
	3		3		< /CH-/<<		CH- / Page-
	4		4		>/CH+/>>		CH+ / Page+
	5		5		Left/<<		<< / Tune-
	6		6		Right/>>		Right
	7		7		1 V2		Shift + 1
	8		8		2 V2		Shift + 2
	9		9		3 V2		Shift + 3





 

 





















 











 




















Original	Replacement	Original	Replacement
 Source	 AV / Input / RDS	 >10	 Guide / EPG / -/--
 Power	 Power	 0/10	 0
 DVD	 Green / APP / Repeat	 C	 Fav / Marker / PC
 TUN	 Red / Netflix / Search	 Up/Pause	 Up
 V1	 Blue / Prime Video / Random	 Left/ <<	 << / Tune-
 V2	 Shift + Blue / Prime	 Enter/Play	 OK
 A1	 Yellow / YouTube / Repeat	 Right/ >>	 >> / Tune+
 A2	 Shift + Red / Netflix /	 Down/Stop	 Stop / Hold
 1	 1	 Down/Stop	 Down
 2	 2	 Enter/Play	 Play / Slow
 3	 3	 Up/Pause	 Pause / Step / Freeze
 4	 4	 I<<	 I<< / Preset-
 5	 5	 >>I	 >>I / Preset+
 6	 6	 Left/ <<	 Left
 7	 7	 Right/ >>	 Right
 8	 8	 PGM/Top Menu	 TV/Radio /
 9	 9	 Subtitle/RDM	 Subtitle / EQ





Original	Replacement	Original	Replacement
 Audio/Disp	 Display / Media	 Right/>> A2	 Shift + >> /
 Repeat	 Shift + Green / APP /	 Down/Stop A2	 Shift + Down
 1 A2	 Shift + 1	 Down/Stop A2	 Shift + Stop /
 2 A2	 Shift + 2	 Enter/Play A2	 Shift + OK
 3 A2	 Shift + 3	 Up/Pause A2	 Shift + Up
 4 A2	 Shift + 4	 I<< A2	 Shift + I<< / Preset-
 5 A2	 Shift + 5	 >>I A2	 Shift + >>I / Preset+
 6 A2	 Shift + 6	 Left/<< A2	 Shift + Left
 7 A2	 Shift + 7	 Right/>> A2	 Shift + Right
 8 A2	 Shift + 8	 PGM/Top Menu	 Shift + TV/Radio / Program
 9 A2	 Shift + 9	 RDM/Subtitle A2	 Shift + Subtitle / EQ
 >10 A2	 Shift + Guide / EPG / -/-	 Audio Disp A2	 Shift + Display / Media
 0/10 A2	 Shift + 0	 Repeat A2	 Shift + Yellow / YouTube /
 C A2	 Shift + Fav / Marker / PC		
 Up/Pause A2	 Shift + Pause / Step /		
 Left/<< A2	 Shift + << /		
 Enter/Play A2	 Shift + Play / Slow		

