













Original	Replacement	Original	Replacement
 Standby	 Power	 Tv/Radio	 TV/Radio /
 Source	 AV / Input / RDS	 Display	 Display / Media
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Mute	 Mute / Dimmer
 9	 9	 Vol+	 Vol+
 FAV	 Fav / Marker / PC	 EPG	 Guide / EPG / ---
 0	 0	 CH+	 CH+ / Page+
 Recall	 Back / Return	 Vol-	 Vol-
 P.Mode	 Picture / Format	 Media	 Shift + Display / Media
 S.Mode	 Sound / Title	 Media	 Setup / OPT /
 Sleep	 Sleep / Timer	 CH-	 CH- / Page-

Original	Replacement	Original	Replacement
 Tv/Radio	 TV/Radio /	 Tv/Radio	 TV/Radio /
 Display	 Display / Media	 Tv/Radio	 TV/Radio /
 Up	 Up	 Tv/Radio	 TV/Radio /
 Left	 Left	 Tv/Radio	 TV/Radio /
 OK	 OK	 Tv/Radio	 TV/Radio /
 Right	 Right	 Tv/Radio	 TV/Radio /
 Menu	 Menu / Home	 Tv/Radio	 TV/Radio /
 Down	 Down	 Tv/Radio	 TV/Radio /
 Exit	 Exit / Cancel / Clear	 Tv/Radio	 TV/Radio /
 Mute	 Mute / Dimmer	 Tv/Radio	 TV/Radio /
 Vol+	 Vol+	 Tv/Radio	 TV/Radio /
 EPG	 Guide / EPG / ---	 Tv/Radio	 TV/Radio /
 CH+	 CH+ / Page+	 Tv/Radio	 TV/Radio /
 Vol-	 Vol-	 Tv/Radio	 TV/Radio /
 Media	 Shift + Display / Media	 Tv/Radio	 TV/Radio /
 Media	 Setup / OPT /	 Tv/Radio	 TV/Radio /
 CH-	 CH- / Page-	 Tv/Radio	 TV/Radio /



