



















 








 
 






 



 

 
 


 


 

 

 




Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Fav / Marker / PC
 0	 0
 .	 TV/Radio /
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 P.Mode	 Picture / Format

Original	Replacement
 S.Mode	 Sound / Title
 Home	 Shift + Menu /
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 [++]	 D.Menu / Top
 Vol+	 Vol+
 Smart Colours	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 [i+]	 Info / Angle
 Guide	 Guide / EPG / -/-





Original	Replacement
Mute	Mute / Dimmer
<<	<< / Tune-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>	>> / Tune+
I<<	I<< / Preset-
Stop	Stop / Hold
>>I	>>I / Preset+
Text	Text / Goto
Aspect	Zoom / Size
Subtitles	Subtitle / EQ
MTS	Display / Media
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Replacement

