



Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Lang	 Audio / Lang I/II
 0	 0
 TXT	 Text / Goto
 Home	 Smart / List
 Home	 D.Menu / Top
 Vol+	 Vol+

Original	Replacement
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 [G]	 Menu / Home
 Up	 Up
 i	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode





Original	Replacement	Original	Replacement
 Play	 Play / Slow		
 Stop	 Stop / Hold		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

Original	Replacement

