



| Original | | Replacement | | Original | | Replacement | |
|---|------------|---|--------------------------|---|-----------|---|-----------------------|
|  | Power |  | Power |  | Down |  | Down |
|  | Mute |  | Mute / Dimmer |  | Exit |  | Exit / Cancel / Clear |
|  | Picture |  | Picture / Format |  | 1 |  | 1 |
|  | Sound |  | Sound / Title |  | 2 |  | 2 |
|  | Aspect |  | Shift + Picture / Format |  | 3 |  | 3 |
|  | Sleep |  | Sleep / Timer |  | 4 |  | 4 |
|  | Subtitle |  | Subtitle / EQ |  | 5 |  | 5 |
|  | CH. List |  | Smart / List |  | 6 |  | 6 |
|  | EPG |  | Guide / EPG / -/-- |  | 7 |  | 7 |
|  | FAV |  | Fav / Marker / PC |  | 8 |  | 8 |
|  | TV / Radio |  | TV/Radio / |  | 9 |  | 9 |
|  | Up |  | Up |  | 0 |  | 0 |
|  | Input |  | AV / Input / RDS |  | Recall |  | Back / Return |
|  | Left |  | Left |  | Info |  | Info / Angle |
|  | OK |  | OK |  | Vol + |  | Vol+ |
|  | Right |  | Right |  | Rec |  | Rec / Rec Mode |
|  | Menu |  | Menu / Home |  | Rec. List |  | Display / Media |





| Original | Replacement |
|----------|-------------------------------|
| | CH+ / Page+ |
| | Vol- |
| | Play / Slow |
| | Pause / Step / Freeze |
| | Stop / Hold |
| | CH- / Page- |
| | Red / Netflix / Search |
| | Green / APP / Repeat |
| | Yellow / YouTube / Repeat |
| | Blue / Prime Video / Random |
| | Text / Goto |
| | Shift + Exit / Cancel / Clear |
| | Eject / Surround |
| | Audio / Lang I/II |
| | << / Tune- |
| | >> / Tune+ |
| | I<< / Preset- |

| Original | Replacement |
|----------|---------------|
| | >>I / Preset+ |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

