



 



















Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	TXT		Text / Goto
	Vol+		Vol+
	Source		AV / Input / RDS
	P+		CH+ / Page+
	Vol-		Vol-
	Home		Menu / Home
	P-		CH- / Page-
	*		Smart / List
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix / Search
	YouTube		Shift + Yellow / YouTube / Repeat A-B
	prime video		Shift + Blue / Prime / Random
	USB		Shift + 8
	Red		Red / Netflix / Search





Original	Replacement
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 << / Tune-
	 Play / Slow
	 Pause / Step / Freeze
	 >> / Tune+
	 Rec / Rec Mode
	 Stop / Hold
	 Audio / Lang I/II

Original	Replacement

