



 




 



 


 












 




 



Original	Replacement	Original	Replacement
On/Off	 Power	Menu Left	 Left
Audio Off	 Mute	Next	 >>
Slow Down	 Ch -	Progr.	 Sleep
Stop	 Stop	Prev.	 <<
Slow Up	 Ch +	OK Enter	 Ok
Auto/Track	 Red	Top Menu	 +  Shift + Menu
Pause	 Pause	Menu Right	 Right
Subt.	 Subt	Menu Down	 Down
Rep/A-B	 +  Shift + Text	Volume+	 Vol +
Title	 List	Volume-	 Vol -
Repeat/1/All	 Text	1	 1
Zoom	 +  Shift + Eject	2	 2
DVD/TV	 Media	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	Mark	 +  Shift + Pre Ch
Display	 Info	Digest	 +  Shift + Info
Return	 Back	Rewind	 <<



Original	Replacement	Original	Replacement
Play	 Play	Np	 Shift + Subt
Record	 Rec	Input Source	 AV
F.Forward	 >>	Setup	 Options
R/L	 Green	Audio	 Dual
Pbc	 Yellow	3D	 3D
5	 5		
6	 6		
7	 7		
8	 8		
Video	 Smart		
9	 9		
Syst.Preset	 D. Menu		
+10	 Guide		
Angle	 Format		
0	 0		
C/CH	 Pre Ch		
Open/Close	 Eject		

Original	Replacement
Np	 Shift + Subt
Input Source	 AV
Setup	 Options
Audio	 Dual
3D	 3D

