

 

 

 

 

 

 







 

 

 

 





 



 

 



 



 



















 





Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 Sleep	 Sleep / Timer	 Stop/Exit/Cancel	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 Stop/Exit/Cancel	 Stop / Hold
 Mode	 AV / Input / RDS	 -/--	 Guide / EPG / -/--
 1	 1	 0	 0
 2	 2	 Back	 Back / Return
 3	 3	 SYS Menu	 Menu / Home
 Eject/Nicam2	 Eject / Surround	 Rec	 Rec / Rec Mode
 Eject/Nicam2	 Sound / Title	 Up	 Up
 4	 4	 CH+	 CH+ / Page+
 5	 5	 DTV/Radio	 TV/Radio /
 6	 6	 Left	 Left
 TXT/MIX	 Text / Goto	 Enter	 OK
 Play/Pause	 Play / Slow	 Right	 Right
 Play/Pause	 Pause / Step / Freeze	 Vol-	 Vol-
 7	 7	 Down	 Down
 8	 8	 CH-	 CH- / Page-





Original	Replacement
Vol+	Vol+
Return	Shift + Back / Return
Menu DVD	D.Menu / Top
Setup	Setup / OPT /
Display	Display / Media
Search/FAV	Shift + Red / Netflix /
Search/FAV	Fav / Marker / PC
Slow/EPG	Shift + Play /
Slow/EPG	Shift + Guide / EPG / --
Language/Info	Audio / Lang I/II
Language/Info	Info / Angle
Zoom/List	Zoom / Size
Zoom/List	Smart / List
Red/Angle	Red / Netflix / Search
Red/Angle	Shift + Info / Angle
Green/Program	Green / APP / Repeat
Green/Program	Shift + TV/Radio / Program

Original	Replacement
Yellow/Repeat	Shift + Green / APP /
Yellow/Repeat	Yellow / YouTube / Repeat
Blue/A-B	Blue / Prime Video / Random
Blue/A-B	Shift + Yellow / YouTube /
<</Hold	Shift + Stop /
<</Hold	<< / Tune-
>>/Index	>> / Tune+
I<</Size	I<< / Preset-
I<</Size	Shift + Zoom /
>>I/Reveal	>>I / Preset+
Subtitle	Subtitle / EQ
Title/Subpage	Shift + Sound / Title
FAV-	Shift + Down
FAV+	Shift + Up

