



| Original | | Replacement | | Original | | Replacement | |
|---|-------------|---|---------------|---|------------|---|-------|
|  | Power Blue |  | Shift + Power |  | >> |  | >> |
|  | POWER Red |  | Power |  | Home |  | Smart |
|  | RED / F1 |  | Red |  | BACK |  | Back |
|  | GREEN / F2 |  | Green |  | UP |  | Up |
|  | YELLOW / F3 |  | Yellow |  | LEFT |  | Left |
|  | BLUE / F4 |  | Blue |  | OK |  | Ok |
|  | MUTE |  | Mute |  | RIGHT |  | Right |
|  | AV |  | AV |  | DOWN |  | Down |
|  | Sound Mode |  | Dual |  | : ≡ |  | Menu |
|  | SETUP |  | Options |  | i |  | Info |
|  | APP |  | Media |  | VOL+ |  | Vol + |
|  | TV |  | TV/R |  | PLAY/PAUSE |  | Pause |
|  | ≡ |  | Text |  | PLAY/PAUSE |  | Play |
|  | KB |  | Guide |  | CHAN.+ |  | Ch + |
|  | I<< |  | I<< |  | VOL- |  | Vol - |
|  | >>I |  | >>I |  | STOP |  | Stop |
|  | << |  | << |  | CHAN.- |  | Ch - |





| Original | | Replacement | | Original | | Replacement | |
|----------|--------|-------------|--------|----------|--|-------------|--|
| | 1 | | 1 | | | | |
| | 2 | | 2 | | | | |
| | 3 | | 3 | | | | |
| | 4 | | 4 | | | | |
| | 5 | | 5 | | | | |
| | 6 | | 6 | | | | |
| | 7 | | 7 | | | | |
| | 8 | | 8 | | | | |
| | 9 | | 9 | | | | |
| | Format | | Format | | | | |
| | 0 | | 0 | | | | |
| | Recall | | Pre Ch | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

