












 








Original	Replacement	Original	Replacement
On/Off	 Power	Green	 Green / APP / Repeat
3.*	 +  Shift + 3	Yellow	 Yellow / YouTube / Repeat
Store	 Setup / OPT /	Blue	 Blue / Prime Video / Random
Reveal	 Play / Slow	Tone-	 I<< / Preset-
On/Off	 +  Shift + Power	Tone+	 >>I / Preset+
Tune+	 >> / Tune+	3	 3
Tune-	 << / Tune-	Audio+	 +  Shift + Vol+
4	 4	Search	 +  Shift + Red / Netflix /
5	 5	4.# 16:9	 Picture / Format
6	 6	Surround	 Eject / Surround
7	 7	Nicam/Mono	 +  Shift + Audio / Lang I/II
8	 8	Level L	 +  Shift + Left
9	 9	Level R/Woofer	 +  Shift + Right
Guide -/-- 1.	 Guide / EPG / -/--	Display	 Display / Media
0/10	 0	Mute	 Mute / Dimmer
2.Fav P/C 2.	 Fav / Marker / PC	Txt Stop	 Stop / Hold
Red	 Red / Netflix / Search	Info	 Info / Angle



Original	Replacement	Original	Replacement
Subt.List	 Subtitle / EQ	Volume-	 Vol-
Sleep Timer	 Sleep / Timer	Menu audio	 Audio / Lang I/II
Return TV	 TV/Radio /	Chan.Down	 CH- / Page-
Menu video	 D.Menu / Top	1	 1
Text	 Text / Goto	2	 2
Txt Expand	 Zoom / Size		
TV/AV	 AV / Input / RDS		
Menu	 Menu / Home		
Menu Up	 Up		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Menu Off	 Exit / Cancel / Clear		
Menu Down	 Down		
Back	 Back / Return		
Volume+	 Vol+		
Chan.Up	 CH+ / Page+		

