



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DTV/ATV		D.Menu / Top
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	Vol+		Vol+
	Vol-		Vol-
	MTS		Info / Angle
	Rec List		Smart / List
	CH+		CH+ / Page+
	CH-		CH- / Page-
	FAV/List		Fav / Marker / PC
	Rec		Rec / Rec Mode





Original	Replacement
Freeze	Pause / Step / Freeze
Guide	Guide / EPG / -/-
<<	<< / Tune-
>> / Aspect	>> / Tune+
>> / Aspect	Shift + Picture / Format
<< / Cancel	<< / Preset-
<< / Cancel	Shift + Exit / Cancel / Clear
>>  / Sub.PG	>>  / Preset+
Stop / Index	Stop / Hold
Play/Pause / Timeshift	Play / Slow
Tv/Radio	TV/Radio /
Subtitle	Subtitle / EQ
Reveal	Eject / Surround
Size	Zoom / Size
Hold	Shift + Stop /
Text	Text / Goto
Red	Red / Netflix / Search

Original	Replacement
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Cyan	Blue / Prime Video / Random







Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DTV/ATV		D.Menu / Top
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	Vol+		Vol+
	Vol-		Vol-
	MTS		Info / Angle
	Rec List		Smart / List
	CH+		CH+ / Page+
	CH-		CH- / Page-
	FAV/List		Fav / Marker / PC
	Rec		Rec / Rec Mode





	Original	Replacement	Original	Replacement
	 Freeze	 Pause / Step / Freeze	 Green	 Green / APP / Repeat
	 Guide	 Guide / EPG / -/--	 Yellow	 Yellow / YouTube / Repeat
	 <<	 << / Tune-	 Cyan	 Blue / Prime Video / Random
	 >> / Aspect	 >> / Tune+		
	 >> / Aspect	 Shift + Picture / Format		
	 I<< / Cancel	 I<< / Preset-		
	 I<< / Cancel	 Shift + Exit / Cancel / Clear		
	 >>I / Sub.PG	 >>I / Preset+		
	 Stop / Index	 Stop / Hold		
	 Play/Pause / Timeshift	 Play / Slow		
	 Tv/Radio	 TV/Radio /		
	 Subtitle	 Subtitle / EQ		
	 Reveal	 Eject / Surround		
	 Size	 Zoom / Size		
	 Hold	 Shift + Stop /		
	 Text	 Text / Goto		
	 Red	 Red / Netflix / Search		

