









 



 




















 











 
 




 


 



 


 














Original		Replacement		Original		Replacement	
	Standby		Power		Stop		Stop / Hold
	1		1		Play/Pause		Play / Slow
	2		2		Play/Pause		Pause / Step / Freeze
	3		3		I>/Resume		Shift + Play /
	4		4		Surround		Eject / Surround
	5		5		Sound		Sound / Title
	6		6		Night		Shift + Sleep / Timer
	7		7		Mute		Mute / Dimmer
	8		8		Repeat		Green / APP / Repeat
	9		9		Repeat A-B		Yellow / YouTube / Repeat
	0		0		Sleep		Sleep / Timer
	Vol+		Vol+		DIM		Shift + Mute / Dimmer
	Vol-		Vol-		Subw +		Up
	Left		Left		Rear +		Shift + CH+ /
	Right		Right		Center +		CH+ / Page+
	I<<		I<< / Preset-		Tv Vol+		Shift + Vol+
	>>I		>>I / Preset+		Subw -		Down





 

 


 


















Original	Replacement
 Rear -	 Shift + CH- /
 Center -	 CH- / Page-
 Tv Vol-	 Shift + Vol-

Original	Replacement







 



 

 

 









 

 



 





Original	Replacement
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Disc (DVD)	 D.Menu / Top
 0	 0
 Vol+	 Vol+
 System (DVD)	 Menu / Home
 Vol-	 Vol-
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

Original	Replacement
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 I>/Resume	 Shift + Play /



























Original	Replacement	Original	Replacement
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down





Original		Replacement		Original		Replacement	
	Standby		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				

