

















































































| Original | Replacement | Original | Replacement |
|------------|--|--------------|---|
| Off |  Power | Up / P+ |  Up |
| Mute |  Mute / Dimmer | Left / Vol- |  Left |
| Hold |  Stop / Hold | OK |  OK |
| Reveal |  << / Tune- | Right / Vol+ |  Right |
| Sound |  Sound / Title | PS |  Exit / Cancel / Clear |
| A/B |  Audio / Lang I/II | Down / P- |  Down |
| Subcode |  Subtitle / EQ | P/C |  Back / Return |
| <!> |  Eject / Surround | Right / Vol+ |  Vol+ |
| earspnes |  Picture / Format | VT/TV |  Smart / List |
| Size |  Zoom / Size | Up / P+ |  CH+ / Page+ |
| [.] |  Sleep / Timer | Left / Vol- |  Vol- |
| Norm |  TV/Radio / | Display |  Display / Media |
| Contrast |  D.Menu / Top | Down / P- |  CH- / Page- |
| Color |  Setup / OPT / | 1 |  1 |
| Text |  Text / Goto | 2 |  2 |
| AV |  AV / Input / RDS | 3 |  3 |
| Brightness |  Menu / Home | 4 |  4 |



| Original | Replacement | Original | Replacement |
|----------|--|----------|-------------|
| 5 |  5 | | |
| 6 |  6 | | |
| 7 |  7 | | |
| 8 |  8 | | |
| 9 |  9 | | |
| -- |  Guide / EPG / -- | | |
| 0 |  0 | | |
| Red |  Red / Netflix / Search | | |
| Green |  Green / APP / Repeat | | |
| Yellow |  Yellow / YouTube / Repeat | | |
| Blue |  Blue / Prime Video / Random | | |
| Mix |  Shift + Text / | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |



| Original | Replacement | Original | Replacement |
|--------------|---|------------|---|
| On/Off |  Power | Info |  Info / Angle |
| Mute |  Mute / Dimmer | Menu Left |  Left |
| Update |  Play / Slow | OK Enter |  OK |
| Reveal |  Pause / Step / Freeze | Menu Right |  Right |
| Txt Stop |  Stop / Hold | Menu Off |  Exit / Cancel / Clear |
| Color- S.Std |  Sound / Title | Menu Down |  Down |
| Menu audio |  Audio / Lang I/II | Back |  Back / Return |
| Subt.List |  Subtitle / EQ | Volume+ |  Vol+ |
| Surround |  Eject / Surround | Display |  Smart / List |
| Txt Expand |  Zoom / Size | Chan.Up |  CH+ / Page+ |
| Sleep Timer |  Sleep / Timer | Volume- |  Vol- |
| Return TV |  TV/Radio / | Disp |  Display / Media |
| Menu video |  D.Menu / Top | Chan.Down |  CH- / Page- |
| On/Tim |  Setup / OPT / | 1 |  1 |
| Text |  Text / Goto | 2 |  2 |
| Menu |  Menu / Home | 3 |  3 |
| Menu Up |  Up | 4 |  4 |



| Original | Replacement | Original | Replacement |
|-----------------|---|----------|-------------|
| 5 |  5 | | |
| 6 |  6 | | |
| 7 |  7 | | |
| 8 |  8 | | |
| 9 |  9 | | |
| Guide -/-- 1. |  Guide / EPG / -/-- | | |
| 0/10 |  0 | | |
| 2.Fav P/C 2. |  Fav / Marker / PC | | |
| Red |  Red / Netflix / Search | | |
| Green |  Green / APP / Repeat | | |
| Yellow |  Yellow / YouTube / Repeat | | |
| Blue |  Blue / Prime Video / Random | | |
| Nicam/Mono |  Shift + Audio / Lang I/II | | |
| Level L |  Shift + Left | | |
| Level R/Woofers |  Shift + Right | | |
| Audio+ |  Shift + Vol+ | | |
| | | | |

