 



 


 
 

 



 




Original	Replacement	Original	Replacement
 Power	 Power	 >>	 >> / Tune+
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 Red	 Red / Netflix / Search	 Up	 Up
 Green	 Green / APP / Repeat	 Back	 Back / Return
 Yellow	 Yellow / YouTube / Repeat	 Left	 Left
 Blue	 Blue / Prime Video / Random	 OK	 OK
 Internet	 Smart / List	 Right	 Right
 Source	 AV / Input / RDS	 i	 Info / Angle
 Lang	 Audio / Lang I/II	 Down	 Down
 Tv/Radio	 TV/Radio /	 Exit	 Exit / Cancel / Clear
 Subtitle	 Subtitle / EQ	 Vol+	 Vol+
 LIB	 Picture / Format	 P::P	 Display / Media
 Rec	 Rec / Rec Mode	 PR+	 CH+ / Page+
 Stop	 Stop / Hold	 Vol-	 Vol-
 <<	 << / Tune-	 FAV	 Fav / Marker / PC
 Play	 Play / Slow	 PR-	 CH- / Page-
 Pause	 Pause / Step / Freeze	 1	 1





Original		Replacement		Original		Replacement	
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Text		Text / Goto				
	0		0				
	Guide		Guide / EPG / -/--				

