



 







 

 





 



 


 
 

 









 

 
 


 

 



 





 



 



 

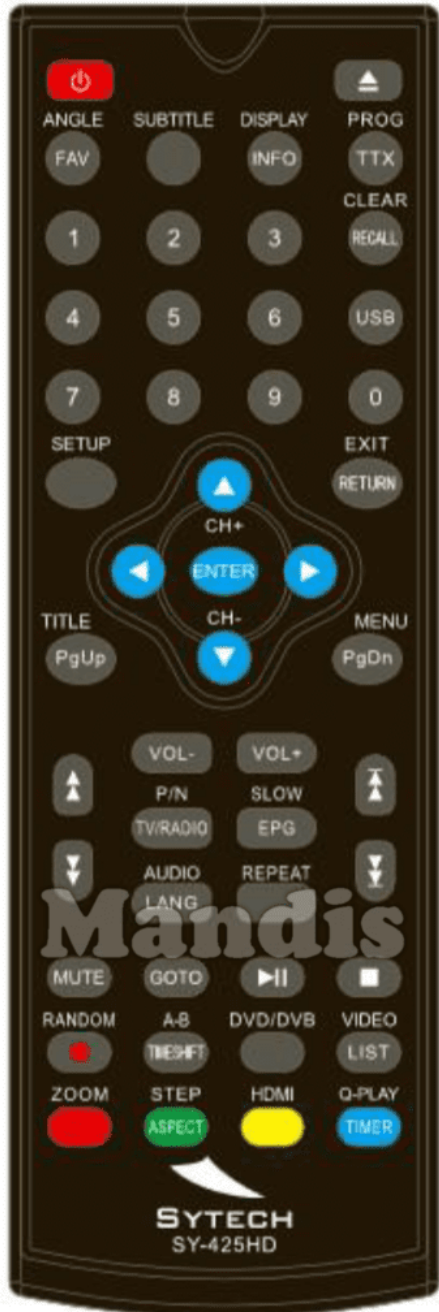 


Original		Replacement		Original		Replacement	
	Power		Power		7		7
	Open / Close		Eject / Surround		8		8
	Fav / Angle		Fav / Marker / PC		9		9
	Fav / Angle		Shift + Info / Angle		0		0
	Subtitle		Subtitle / EQ		Setup		Setup / OPT /
	Info / Display		Display / Media		Up / CH+		CH+ / Page+
	Info / Display		Info / Angle		Up / CH+		Up
	TTX / Prog		Text / Goto		Return / Exit		Exit / Cancel / Clear
	TTX / Prog		Shift + TV/Radio / Program		Left		Left
	1		1		Enter		OK
	2		2		Right		Right
	3		3		PgUp / Title		Shift + CH+ /
	Recall / Clear		Back / Return		PgUp / Title		Sound / Title
	4		4		Down / CH-		CH- / Page-
	5		5		Down / CH-		Down
	6		6		PgDn / Menu		Menu / Home
	USB		Shift + 8		PgDn / Menu		Shift + CH- /

Page-





Original	Replacement	Original	Replacement
	>>		>> / Tune+
	Vol-		Vol-
	Vol+		Vol+
	>>I		>>I / Preset+
	TV/Radio / P/N		TV/Radio /
	EPG / Slow		Guide / EPG / -/--
	EPG / Slow		Shift + Play /
	<<		<< / Tune-
	Lang / Audio		Audio / Lang I/II
	Repeat		Shift + Green / APP /
	I<<		I<< / Preset-
	Mute		Mute / Dimmer
	Go To		Shift + Text /
	Play / Pause		Play / Slow
	Stop		Stop / Hold
	Rec / Random		Rec / Rec Mode
	Rec / Random		Shift + Blue / Prime Video / Random
	Timeshift / AB		Shift + Yellow / YouTube /
	DVD / DVB		Shift + 2
	List / Video		Smart / List
	Red / Zoom		Zoom / Size
	Red / Zoom		Red / Netflix / Search
	Green / Aspect / Step		Picture / Format
	Green / Aspect / Step		Green / APP / Repeat
	Green / Aspect / Step		Pause / Step / Freeze
	Yellow / HDMI		Yellow / YouTube / Repeat
	Yellow / HDMI		Shift + 0
	Blue / Timer / QPlay		Sleep / Timer
	Blue / Timer / QPlay		Blue / Prime Video / Random

