







 


















 


 

 

 

 

 







 






 







 


 






Original	Replacement
 Power	 Power
 Tv	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV CH	 Fav / Marker / PC
 0	 0
 PRE CH	 Back / Return
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 Source	 AV / Input / RDS
 PR-	 CH- / Page-
 Info	 Info / Angle
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /
 Up	 Up
 Return	 Shift + Back / Return
 Left	 Left
 Enter	 OK
 Right	 Right
 CH LIST	 Smart / List
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow Yellow / YouTube / Repeat		
	Blue Blue / Prime Video / Random		
	TTX/MIX Text / Goto		
	Media P Display / Media		
	P SIZE Zoom / Size		
	Dual Audio / Lang I/II		
	AD Eject / Surround		
	SUBT Subtitle / EQ		
	<< << / Tune-		
	Pause Pause / Step / Freeze		
	>> >> / Tune+		
	Rec Rec / Rec Mode		
	Play Play / Slow		
	Stop Stop / Hold		

