






Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Subtitle / EQ
	 Zoom / Size
	 D.Menu / Top
	 Setup / OPT /
	 Text / Goto
	 AV / Input / RDS
	 Menu / Home
	 Up

Original	Replacement
	 Info / Angle
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Down
	 Back / Return
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-
	 1
	 2
	 3
	 4





	Original	Replacement	Original	Replacement
	 5	 5		
	 6	 6		
	 7	 7		
	 8	 8		
	 9	 9		
	 GUIDE	 Guide / EPG / -/--		
	 0	 0		
	 Red/A	 Red / Netflix / Search		
	 Green/B	 Green / APP / Repeat		
	 Yellow/C	 Yellow / YouTube / Repeat		
	 Blue/D	 Blue / Prime Video / Random		
	 Return	 Shift + Back / Return		

