




Original	Replacement
	Power
	Mute / Dimmer
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Subtitle / EQ
	Zoom / Size
	D.Menu / Top
	Setup / OPT /
	Text / Goto
	AV / Input / RDS
	Menu / Home
	Up

Original	Replacement
	Info / Angle
	Left
	OK
	Right
	Exit / Cancel / Clear
	Down
	Back / Return
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	Display / Media
	CH- / Page-
	1
	2
	3
	4





Original	Replacement
5	5
6	6
7	7
8	8
9	9
Guide	Guide / EPG / -/--
0	0
Red/A	Red / Netflix / Search
Green/B	Green / APP / Repeat
Yellow/C	Yellow / YouTube / Repeat
Blue/D	Blue / Prime Video / Random
Return	Shift + Back / Return

Original	Replacement

