










 

 



 









 









 



 












 




 




 


 








Original	Replacement	Original	Replacement
 Standby/On	 Power	 <<	 <<
 1	 1	 >>	 >>
 2	 2	 Play	 Play
 3	 3	 Stop	 Stop
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 Mute	 Mute
 7	 7	 Prog+	 Ch +
 8	 8	 Prog-	 Ch -
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 Tv/DVD	 TV/R	 Menu	 Menu
 Open/Close	 Eject	 Return	 Back
 DTV/Analog	 Smart	 Exit	 Exit
 Input Sel	 AV	 Title List/Disc Menu	 Media
 Copy	 Options	 Play List/Title Menu	 Shift + Menu
 Pause	 Pause	 Red	 Red












 

 



 



















 



 

 










 
 







 
 







	Original	Replacement	Original	Replacement
	Input Sel			AV
	1			1
	2			2
	3			3
	4			4
	5			5
	6			6
	7			7
	8			8
	9			9
	0			0
	Prog+			Ch +
	Prog-			Ch -
	Standby/On TV			Power
	Mute Tv			Mute
	Tv Vol+			Vol +
	Tv Vol-			Vol -





Original	Replacement	Original	Replacement
 Standby/On	 Power	 I<<	 I<<
 1	 1	 >>I	 >>I
 2	 2	 Play	 Play
 3	 3	 Stop	 Stop
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 Prog+	 Ch +
 7	 7	 Prog-	 Ch -
 8	 8	 Menu	 Menu
 9	 9	 Return	 Back
 0	 0	 Exit	 Exit
 Tv/DVD	 TV/R	 Title List/Disc Menu	 Media
 Open/Close	 Eject	 Play List/Title Menu	 Shift + Menu
 DTV/Analog	 Smart	 Red	 Red
 Input Sel	 AV	 Green	 Green
 Copy	 Options	 Yellow	 Yellow
 Pause	 Pause	 Blue	 Blue



