












 



 



 

 
 
 











Original	Replacement
 Power	 Power
 Open / Close	 Eject
 Dimmer /	 TV/R
 DVD	 Shift + 1
 Tuner / Band	 Shift + 2
 AUX	 Shift + 3
 NTSC/PAL / EZ	 AV
 MO/ST / Slow	 Format
 MO/ST / Slow	 Shift + Play
 Subtitle	 Subt
 Step	 Shift + Pause
 DSP / EQ	 Options
 Repeat	 Text
 I<<	 I<<
 Stop	 Stop
 Play / Pause	 Pause
 Play / Pause	 Play

Original	Replacement
 >>I	 >>I
 Dolby PLII Mode	 Smart
 Volume +	 Vol +
 Volume -	 Vol -
 Tuning + / CH +	 Ch +
 Tuning - / CH -	 Ch -
 Dolby PLII Effect	 Media
 Return	 Back
 Menu	 Menu
 Info	 Info
 Mute	 Mute
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 1 / RDS Display	 1





Original Replacement

	1 / RDS Display	+	Shift + Info
	2		2
	3 / TA		3
	Test Tone		3D
	4 / PTY -	+	Shift + Left
	4 / PTY -		4
	5 / PTY Search		5
	5 / PTY Search	+	Shift + Ok
	6 / PTY +		6
	6 / PTY +	+	Shift + Right
	Sound Edit		Dual
	7		7
	8		8
	9		9
	P.Scan / Tuner		Pre Ch
	Sleep		Sleep
	0		0

Original Replacement

	Cancel		Exit
	Zoom	+	Shift + Eject
	Logo		Red
	Slide Mode		Green
	Digest		Guide
	Remain		Yellow




 













 



























 

 





 
Mandis

Mandis SHOP  
www.mandis.tv





Original	Replacement
 Power	 Power
 TV / Video	 TV/R
 Volume +	 Vol +
 Volume -	 Vol -
 Tuning + / CH +	 Ch +
 Tuning - / CH -	 Ch -
 Menu	 Menu
 Info	 Info
 Mute	 Mute
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 1 / RDS Display	 1
 2	 2
 3 / TA	 3

Original	Replacement
 4 / PTY -	 4
 5 / PTY Search	 5
 6 / PTY +	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Sleep	 Sleep
 Cancel	 Back

