



 
 
 
 
 

 
 
 
 
 
 


 
 

 
 



 
 
 
 
 

 

 



 

 


 
 
 

 

 





 

 


 

 


 

 









 






 
 


 

 
Original	Replacement
 Standby/On	 Power
 Open/Close	 Eject
 DVD	 Smart
 HDD	 Media
 USB	 Shift + Media
 Input Sel	 Subt
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv/DVD	 TV/R

Original	Replacement
  <<	  <<
 >>	 >>
 <<	 <<
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 >>	 >>
 Tv Vol+	 Vol +
 Tv Vol-	 Vol -
 Tv Mute	 Mute
 Audio	 Dual
 DTV/Analog	 Format
 Prog+	 Ch +
 Prog-	 Ch -
 Menu	 Menu
 Return	 Back
 Up	 Up








 
 

 



 






 

 
 







 

 



Original	Replacement
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Title List/Disc Menu	 List
 Info	 Info
 Exit	 Exit
 Play List/Title Menu	 D. Menu
 Red/Subtitle	 Red
 Green/Rec	 Green
 Yellow/ALT	 Yellow
 Blue/FAV List	 Blue
 Guide	 Guide
 Marker/Tv/Radi	 3D
 Repeat/Timer	 AV
 Text	 Text
 Rec	 Rec

Original	Replacement
 Rec Pause/Time Shift	 +  Shift + Pause





Original	Replacement	Original	Replacement
 Tv Standby/On	 Power		
 Input Sel	 AV		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Tv Mute	 Mute		
 Tv Vol+	 Vol +		
 Tv Vol-	 Vol -		
 Prog+	 Ch +		
 Prog-	 Ch -		

