 
 





 



 

 

 

 



 

 

 
 


 







 

 

 





Original	Replacement	Original	Replacement
 Power	 Power	 >>	 >>  / Preset+
 Function / TV Source	 AV / Input / RDS	 <<	 << / Tune-
 Open / Close	 Eject / Surround	 >>	 >> / Tune+
 Sleep	 Sleep / Timer	 Stop	 Stop / Hold
 1	 1	 Play	 Play / Slow
 2	 2	 Pause	 Pause / Step / Freeze
 3	 3	 Vol+	 Vol+
 4	 4	 Mute	 Mute / Dimmer
 5	 5	 Tuning/CH+	 CH+ / Page+
 6	 6	 Tuning/CH+	 Shift + >> /
 7	 7	 Vol-	 Vol-
 8	 8	 Repeat	 Shift + Green / APP /
 9	 9	 Tuning/CH-	 CH- / Page-
 V-Sound	 Shift + Sound / Title	 Tuning/CH-	 Shift + << /
 0	 0	 Disc Menu	 D.Menu / Top
 DSP/EQ	 Subtitle / EQ	 Menu	 Menu / Home
 I<<	 I<< / Preset-	 Title Menu	 Sound / Title





Original	Replacement
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Dimmer	 Shift + Mute / Dimmer
 GIGA	 Display / Media
 S.Vol	 Picture / Format
 Audio Upscale / P.Bass	 Audio / Lang I/II

Original	Replacement
 S/W Level	 Zoom / Size
 Tuner Memory	 Smart / List
 Mo/St	 Shift + Audio / Lang I/II
 USB Rec	 Rec / Rec Mode

