















 









 

 



 









 



 



 

 







 



 







Original		Replacement		Original		Replacement	
	Power		Power		Prog+		CH+ / Page+
	Eject		Eject / Surround		Input/Repeat		AV / Input / RDS
	1/Slow-		1		Index		Smart / List
	2		2		TRK Up		Vol+
	3/Slow+		3		Prog-		CH- / Page-
	Q-Pro		Setup / OPT /		Rec		Rec / Rec Mode
	4/← Shuttle		4		Menu		Menu / Home
	5		5		Audio		Audio / Lang I/II
	6/Shuttle →		6		TV/VCR		TV/Radio /
	IPC		D.Menu / Top		Speed		Picture / Format
	7/▼ V-Lock		7		Play		Play / Slow
	8		8		Pause		Pause / Step / Freeze
	9/▲ V-Lock		9		Up		Up
	Display		Display / Media		<<		<< / Tune-
	CLR/RST		Exit / Cancel / Clear		Left		Left
	0/F.ADV		0		OK		OK
	TRK Down		Vol-		Right		Right





Original	Replacement	Original	Replacement
	>>  >> / Tune+		
	Down  Down		
	Stop  Stop / Hold		

