











 

Original	Replacement
On	Power
Program /	Blue / Prime Video / Random
Return	Back / Return
Open / Close	Eject / Surround
Angle	Info / Angle
A.Replay	Subtitle / EQ
Zoom	Zoom / Size
1	1
2	2
3	3
4	4
Audio	Audio / Lang I/II
Sleep	Sleep / Timer
5	5
6	6
7	7
8	8

Original	Replacement
9	9
0	0
Test	Text / Goto
Clear	Exit / Cancel / Clear
Trim	Shift + Smart / List
RDS	AV / Input / RDS
Surround	Shift + Eject / Surround
Tune / Band	TV/Radio /
Mute	Mute / Dimmer
Bass	Shift + Sound / Title
Sound	Sound / Title
Function	Smart / List
Volume -	Vol-
Volume +	Vol+
Setup	Setup / OPT /
Up	Up
Menu	Menu / Home





Original	Replacement
 Left	 Left
 Enter	 OK
 Right	 Right
 Top Menu	 D.Menu / Top
 Down	 Down
 On Screen	 Display / Media
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 << / Tune/PTY -	 << / Tune-
 >> / Tune/PTY	 >> / Tune+
 I<< / Preset -	 I<< / Preset-
 >>I / Preset + / PTY CHK	 >>I / Preset+
 R.Slow	 CH- / Page-
 F.Slow	 CH+ / Page+
 S.T.CH	 Fav / Marker / PC
 S.T.ON/OFF	 Guide / EPG / -/--

Original	Replacement
 Picture Mode	 Picture / Format
 L.Memo	 Shift + Display / Media
 A-B Rep	 Yellow / YouTube / Repeat
 Repeat	 Green / APP / Repeat
 Search Mode	 Red / Netflix / Search

