


 
 

 




 


 
 


 





 










 
 











 



 
 












 
 




Original		Replacement		Original		Replacement	
	Standby		Power		Down		Down
	Mute		Mute		Right		Right
	P/N		Smart		Left		Left
	Open/Close		Eject		OK		Ok
	<<		<<		Vol+		Vol +
	>>		>>		Vol-		Vol -
	Play/Pause		Play		1		1
	Stop		Stop		2		2
	I<<		I<<		3		3
	>>I		>>I		4		4
	Setup		Options		5		5
	Source		AV		6		6
	Info		Info		7		7
	Return/Exit		Exit		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		Slow		Back





Original	Replacement	Original	Replacement
 Goto	 Media		
 Program	 Sleep		
 Title/TTX	 Text		
 Audio	 Dual		
 Subtitle	 Subt		
 Red/Repeat	 Red		
 Green/A-B	 Green		
 Yellow/Menu	 Yellow		
 Blue/Angle	 Blue		
 EPG	 Guide		
 Favorite	 Pre Ch		
 Tv/Radio	 TV/R		
 Zoom	 +  Shift + Eject		

