











Original	Replacement
 Standby / On	 Power
 Top Menu	 D.Menu / Top
 Open / Close	 Eject / Surround
 Audio	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 Skip >>I	 >>I / Preset+
 4	 4
 5	 5
 6	 6
 I<< Skip	 I<< / Preset-
 7	 7
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear
 0	 0

Original	Replacement
 +10	 Guide / EPG / -/-
 Display	 Display / Media
 VCR	 Shift + 4
 DVD	 Shift + 2
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 >>	 >> / Tune+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return














 








 




Original		Replacement	
MODE	Mode	 SMART	Smart / List
ZOOM	Zoom	 SIZE ZOOM	Zoom / Size
	Search Mode	 NETFLIX SEARCH	Red / Netflix / Search
	Subtitle	 EQ SUBTITLE	Subtitle / EQ
ANGLE	Angle	 ANGLE INFO	Info / Angle
REPEAT	Repeat	 APP REPEAT	Green / APP / Repeat
A-B	A-B	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
	Title	 TITLE SOUND	Sound / Title

Original		Replacement	











Original	Replacement
 Standby / On	 Power
 Eject	 Eject / Surround
 Speed	 Smart / List
 Audio	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 CH+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 CH-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 C.Reset	 Exit / Cancel / Clear
 0	 0

Original	Replacement
 +10	 Guide / EPG / -/-
 Slow	 Shift + Play /
 Display	 Display / Media
 VCR	 Shift + 4
 DVD	 Shift + 2
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 >>	 >> / Tune+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Record	 Rec / Rec Mode
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down





Original	Replacement	Original	Replacement
 Search Mode	 Red / Netflix / Search		
 Quick Find	 Info / Angle		
 Time Search	 Sleep / Timer		

