






 

 



 




 



 












 







 
 






 



 

 







 

 




Original	Replacement	Original	Replacement
 Power	 Power	 Left	 Left
 1	 1	 OK	 Ok
 2	 2	 Right	 Right
 3	 3	 Down	 Down
 4	 4	 Mute	 Mute
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 [≡i]/Guide	 Guide
 8	 8	 Menu	 Menu
 9	 9	 Red	 Red
 0	 0	 Exit	 Exit
 AV/Source	 AV	 Green	 Green
 -/--	 Shift + Guide	 I-II	 Dual
 [i]/Info	 Info	 Swap/P<P	 Pre Ch
 CH+	 Ch +	 Yellow	 Yellow
 CH-	 Ch -	 TV/DTV	 TV/R
 Up	 Up	 <<	 I<<





	Original	Replacement	Original	Replacement
	Blue	 D		
	<<			
	Play			
	>>			
	>>>			
	Stop			
	Pause/[+]			
	Rec/PP			
	[≡+]			
	[≡x]			
	[.≡]			
	[≡]			
	[≡?]			
	[≡o]			

